

Wet & Dry Vacuum Cleaner w/Silencer

K034 v03: 24/04/23

Please read and retain these instructions for future reference



Dimensions

(H) 40 x (W) 33cm

Length of mains lead: 4.6m

N.W. 3.6kg/G.W. 4.3kg

- **WET & DRY & BLOW- VACUUM CLEANER (SELF FILTER CLEAN) (WITH SILENCER)**
- **FOR DOMESTIC USE ONLY**
- **12L PLASTIC TANK**
- **VOLTAGE: 220-240V AC**
- **FREQUENCY: 50-60 Hz**
- **POWER: 1000W**
- **PRESSURE: >17KPA**
- **AIR CIRCULATION: 26L/S NOISE: <81dba WITH FILTER ATTACHED**
- **HOSE LENGTH: Ø32*1.4M**
- **THIS POWERFUL VACUUM CLEANER CAN TACKLE DUST, DIRT, DEBRIS, SAND, SAWDUST, WOOD CHIPPINGS, METAL SHAVINGS, AND LIQUIDS.**
- **FEATURES A BLOWING FUNCTION, WHICH DISLODGES DUST, DIRT, DEBRIS AND LEAVES FROM HARD TO REACH AREAS.**
- **STRONG YET LIGHTWEIGHT, COMPACT AND LOW ON NOISE, AND IT HAS FOUR WHEELS FOR QUICK, CONVENIENT CLEANING AND EASY MANOEUVRABILITY.**

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0330 331 0300 Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France


Tel: (+44) 1279 701269

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:


Unpack the components carefully. Please check all parts have been removed from the packaging.





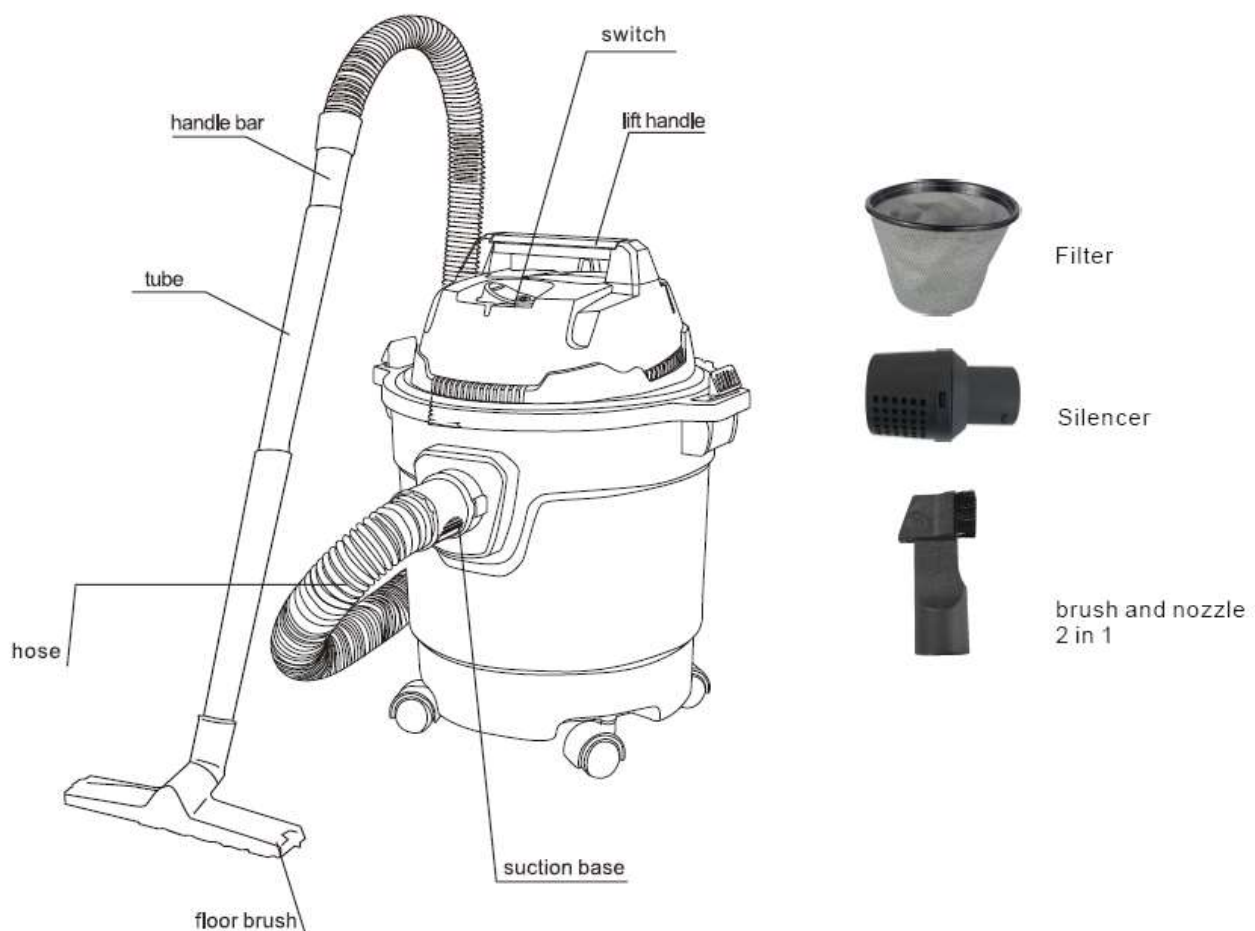













- Bio mimetic cylindrical shape
- Multiple filter system ensures clean air discharge
- New type floor brush with high suction efficiency. Various accessories can be used on floor, carpet, ceiling, furniture, beds etc.

Parts



Safety Notice

 Warning	
<p>Regularly clean the plug with a dry cloth.</p> 	<p>Do NOT use if the electric cable or plug or socket is broken -may cause electric shock and fire</p> 
<p> Plug must be completely inserted before use -may cause electric shock and fire</p>	

 Caution	
<p> Pull plug to unplug. Do not pull the cable. -may cause electric shock and fire</p> 	<p> Do not block air outlets. -may cause electric shock and fire</p> 
<p> Do not immerse in water -may cause electric shock and fire</p> 	<p> Keep suction port clear of blockages. -may cause electric shock and fire</p> 
<p> Do not use or store near flammable materials -may cause electric shock and fire</p> 	<p> Always unplug after use. -may cause electric shock and fire</p> 
<p> Do not use or store near heat sources. -may cause electric shock and fire</p> 	<p></p>
<p></p> 	<p>Keep clear off the blower.</p>

CAN BE USED OUTDOOR IN DRY CONDITIONS. KEEP AWAY FROM RAIN AND STRONG SUNSHINE.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- WHEN THE WATER IN THE TANK IS FULL. THE DEVICE WILL STOP WORKING. THE SUCTION POWER WILL CEASE. THE MACHINE WILL MAKE A NOISE INDICATING THAT THE MOTOR IS RUNNING AT HIGH SPEED. CUT OFF POWER SUPPLY AND CLEAN OUT THE WATER. THEN TURN THE MACHINE BACK ON.
- CAN ONLY BE USED OUTDOORS IN DRY WEATHER CONDITIONS.
- NOT SUITABLE FOR COMMERCIAL USE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC USE ONLY.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSER POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

Safety Cut Out

- When the water tank is full the suction will be cut off and there will be an audible sound indicating the vacuum cleaner is operating at high speed. Turn off the power supply and pour out the water. Leave to completely cool down for 2 hours. Then restart vacuum cleaner.

- When the vacuum cleaner is not in an upright position it will cut out. Turn off the power supply and bring the vacuum cleaner into an upright position. Leave to completely cool down for 2 hours. The restart it.

Assembly

Caution: Always be sure that the cleaner is switched off and unplugged before carrying out any work on the cleaner.

1. Firmly press the castors into the base of the tank.



2. Put the filter bag on the tank edge.



3. Put the head on the tank and set 2 clips tightly into the locked position.




4. Insert the silencer into the blow hole and lock by locking it clockwise.



5. Insert the hose into suction hole and lock in a clockwise direction.



6. Use either floor brush, small brush or nozzle
7. To use the blow function, remove the silencer and insert the hose into the blow hole.
8. Insert the plug into socket and turn the switch to the "ON" position.
9. Use the handle to pick up and carry the vacuum cleaner.

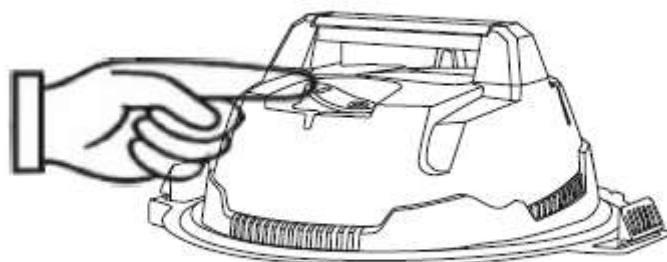


Cleaning and Replacing the Filter

The suction power will reduce as the tank fills up. For optimum performance empty the tank regularly.

How to clean

1. Turn off the power supply.
2. Turn the hose in an anti-clockwise direction to remove it.
3. Loosen the 2 clips to access the head and tank.
4. Slowly lift out the head part.
5. Remove the filter and clean it. The filter bag can be cleaned with clean warm water. If it is very clogged up a neutral cleaning detergent can be used.
6. To re-assembly reverse steps.

Note: Check the position of the filter if the head does not sit properly in position. The direction of the power switch and inlet opening should line up.

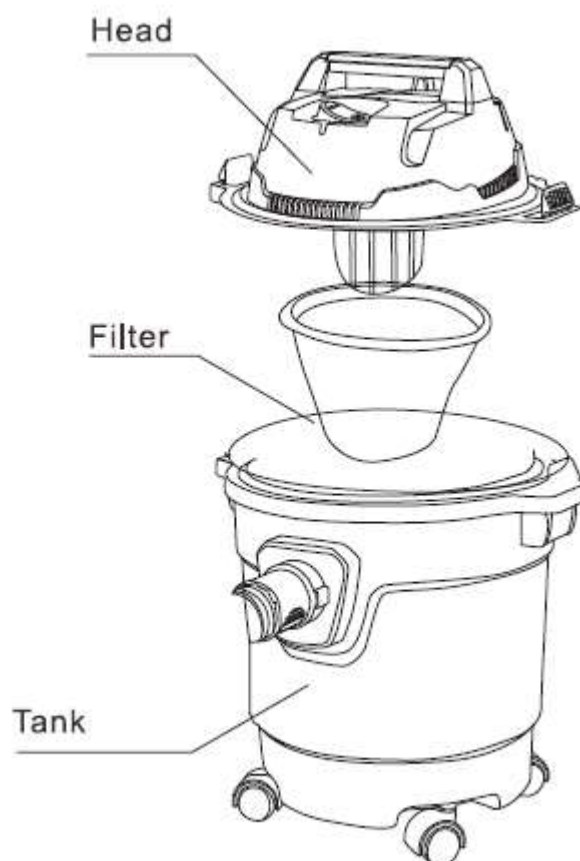

FAQs

Vacuum cleaner does not work.	<ol style="list-style-type: none"> 1. It is not plugged in. 2. The switch is not in the "ON" position. 3. There is no electric power from the socket. 4. The motor has overheated and has cut out. 	<ol style="list-style-type: none"> 1. Plug in correct position. 2. Turn switch to "ON". 3. Check electricity is working. 4. Let the motor cool down for 2 hours. Then switch back on.
Suction power is reduced	<ol style="list-style-type: none"> 1. Dust tank is full. 2. Hose is broken. 3. Suction hole is blocked. 4. Filter is not in correct position. 5. Hose connector is not in correct position. 	<ol style="list-style-type: none"> 1. Empty the dust tank. 2. Replace the hose. 3. Check suction hole and all connecting parts. 4. Re-fit the filter in correct position. 5. Reassemble the hose in correct position.

Brush/nozzle difficult to move	1. Strong suction makes brush/nozzle difficult to move.	1. Adjust the angle between the brush/nozzle and the floor.
--------------------------------	---	---


PLUG WIRING (UK & IRELAND)

This appliance is fitted with a moulded BS 1363 13-amp plug. This is fitted with a 13amp fuse. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	
Type of Plastic	Low Density Polyethylene
Commonly used for	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

