

# Motion Sensor Lighting

K061 v02: 03/10/22

Please read and retain these instructions for future reference

# BERGSTRÖM



## Dimensions

(H) 8 x (W) 3 x (L) 10cm/weight: 85g

- EASY TO ATTACH – STICK, SCREW OR MAGNETIC
- ENERGY SAVING/ EFFICIENT – BATTERY POWERED LEDS
- AUTOMATIC MODE = WILL DETECT MOVEMENT FROM 10 FEET AWAY AND LIGHT UP
- DUSK TO DAWN SENSOR MEANS THEY ONLY LIGHT UP WHEN NEEDED
- CAN ALSO BE SWITCHED TO 'ALWAYS ON' MODE
- EASY TO FIT TO WALLS WHERE THERE ARE CURRENTLY NO WIRES (RAWL PLUGS INCLUDED)
- 30SEC AUTO SHUT IF NO MORE MOVEMENT DETECTED
- 2 LED LIGHTS (not replaceable)
- BATTERY REQUIREMENTS – 3x AA (not included)

## INDOOR USE ONLY

Detection angle: up to approx.90° (vertical) and up to approx.110° (horizontal) up to approx.5m

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

## Parts


Motion and twilight detector (1)



LED lights (4)

Power switch (5)

Magnets (2) Suspension (3)

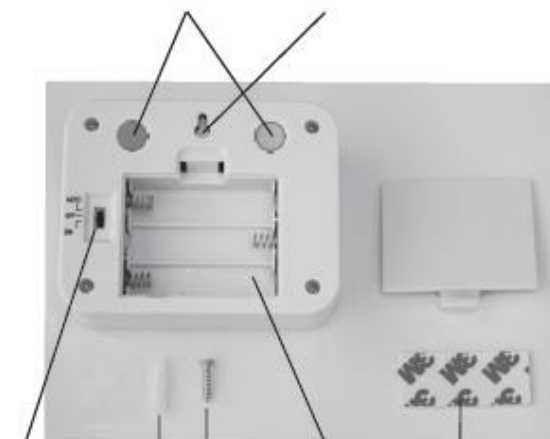

Bolt (6)

Dowel (7)

Hook & loop fastener (8)

Battery compartment (9)

## SAFETY INFORMATION

1. Read through all instructions before use.
2. When passing this device on to third parties, this operating manual must also be handed over.
3. The manufacturer assumes no responsibility for damages arising from improper use or from failure to comply with the instructions in this operating manual.
4. This device is not suitable for use by persons with limited physical, sensory or mental abilities (including children), or used by persons with limited experience and/or knowledge of this device unless they possess the relevant safety knowledge or instructions on how the device is to be used. Children should be accompanied to ensure they do not play with the device.
5. Do not submerge the device in water.
6. The device is only suitable for indoor use. Protect it from moisture.
7. Do not use any sources of open fire (e.g. candles) near the device.
8. There are no user serviceable parts. Repairs must be carried out by a qualified technician only.
9. Do not cover the device with fabric, or similar.
10. Do not use the device in narrow, enclosed spaces, such as cabinets.
11. Do not expose the device to direct sunlight.
12. The LEDS are maintenance-free and non-replaceable.

## USER INSTRUCTIONS

Make sure not to cover the motion and twilight sensor (1).

Use the power switch (5) to select one of the following modes:

ON The device lights up constantly.

OFF The device is switched off.

AUTO The light turns on if it detects a motion during darkness and turns off automatically approx. 35 seconds after no further motion has been detected.

## CLEANING AND CARE

- Use a dry cloth for cleaning the LED sensor light.
- Use a slightly damp cloth for removing more stubborn stains.

## BATTERIES


- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.



- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.

Code & Symbol	
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

