Foot Massager w Heat

K596 v01: 16/03/22

Please read and retain these instructions for future reference





Technical details

Input: 100-240V a.c., 50/60Hz, 0.7A

Output: 12V D.C., 2A

Dimensions

(H) 9.5x (W) 22 x (L) 33cm Length of mains lead: 170cm

- FOOT MASSAGER WITH HEATING AND GENTLE MASSAGE FUNCTION
- 3D DEEP KNEADING RELEAVING STRESS AND FATIGUE
- UNIQUE MASSAGE HEAD DESIGN WHICH PROVIDES A BETTER MASSAGE FEELING
- 8 MASSAGE POINTS ON EACH SIDE
- SIMPLE ONE BUTTON FOR EASY OPERATION
- COUNTER ROTATING MASSAGE
- TEMPERATURE RANGES FROM 45-50 DEGREES C
- TWIN CARRY HANDLES UNDERNEATH FOR EASE/PORTABLILITY

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions included herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original packaging carton. Always follow basic safety precautions and accident prevention measures, including the following:

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR
 ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France Tel: (+44) 1279 701269

Please read and retain these instructions for future reference

- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

ADDITIONAL WARNINGS

- BRUISING CAN OCCUR REGARDLESS OF THE CONTROL SETTING OR PRESSURE APPLIED. CHECK TREATED AREAS FREQUENTLY AND IMMEDIATELY STOP USING THE DEVICE AT THE FIRST SIGN OF PAIN OR DISCOMFORT.
- KEEP HAIR OR ANY OTHER BODY PART AWAY FROM THE SHAFT AND BACKSIDE OF THE APPLICATOR AS PINCHING MAY OCCUR.
- SUPERVISE CHILDREN TO ENSURE THEY DO NOT PLAY WITH THE PRODUCT. CLOSE SUPERVISION IS NECESSARY IF THE PRODUCT IS USED BY OR NEAR CHILDREN.
- DO NOT EXPOSE THE PRODUCT TO DIRECT SUNLIGHT OR PLACE IT NEAR A HEATER OR OTHER HEAT SOURCE. DO NOT USE IT OUTDOORS.
- DO NOT USE THE PRODUCT WHILE DRIVING, STRAIGHT AFTER A MEAL, OR IF THERE IS RISK THAT YOU MIGHT FALL ASLEEP.

Health matters

This product is a non-professional appliance designed to provide a soothing massage. Do not use it as a substitute for medical attention.

- CAUTION: Consult your doctor prior to using this product:
 - if you have any concerns regarding your health, or suffer from an illness that may give you cause for concern
 - if you are pregnant
 - if you have a cardiac pacemaker, artificial joints or electronic implants
 - if you suffer from one or more of the following illnesses and complaints: circulation disorders, varicose veins, open wounds, bruises, broken skin, inflammation of the veins.

The Enterprise **Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595 www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France Tel: (+44) 1279 701269

Please read and retain these instructions for future reference

CAUTION: Do NOT use this product:

- to supplement or replace medical treatment chronic complaints and symptoms may be made worse
- on swollen or inflamed areas or skin eruptions
- if you suffer from any physical ailment that would limit your capacity to operate the control

Instructions for Use

- 1. Plug into a 120-volt socket.
- 2. It is recommended to wear sock while using the unit.
- 1. Do not use the unit while wearing shoes.
- 2. Place massager on the floor in front of your chair or seat.
- 3. To activate massage action, press power button once (Fig.1).
- 4. Changing the pressure of your feet, will change the feel of the massage. If the unit tickles you, then you may need to apply more pressure or you may need be become accustomed to the sensation. If the massage feels too strong, you may need to lighten the pressure of your feet on the unit.
- 5. To activate soothing heat with the massage, press the power button one more time(Fig.1). Allow a few moments for the heating function to warm up.
- 6. When finished, press the power button one more time to turn the unit off and unplug.
- 7. Note:As a safety feature, the soothing heat function can be used only with the massage feature.
- **8.** Caution: To avoid user injury and irreparable damage to the unit, always remain seated when using massager. **Never stand on the unit.**



(Fig.1)

Care, cleaning and storage

- Before cleaning or maintaining the device, make sure it is disconnected from the power socket.
- Only clean the housing with a soft, dry or slightly damp cloth. Do not use liquid or aerosol cleaners. Do not use solvent or oil-based cleaners.
- Do not use chemical, steel wool or abrasive cleaners to clean the outside of the massage seat as these chemicals may damage the finish.
- Store the appliance in a cool and dry indoor area, disconnected from the power supply and out of direct sunlight.
- Do not use the product if it has been damaged or is not working properly.
- Do not attempt to repair, disassemble or modify the product; there are no user-serviceable parts inside.
- In case of damage, contact our after sales support centre.
- Improper installation or misuse may result in the risk of fire, electric shock and injury. We accept no
 responsibility for any possible injury or damage caused by improper use or noncompliance with these
 instructions.

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France Tel: (+44) 1279 701269

Please read and retain these instructions for future reference

Instructions for Use

v001: 16/03/22

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use If the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags Contains the following recyclable plastic.



Code & Symbol	OTHER
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

• At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France Tel: (+44) 1279 701269