

# Extendable Torch

K984 v02: 03/10/22

Please read and retain these instructions for future reference



## Dimensions

(D) 3.4 x (L) 14.3cm

- 550-700 LUMENS
- RANGE UP TO 300m
- SLIDE ZOOM FUNCTION FOR WIDE AND NARROW FIELD OF VISION
- 360° SIDELIGHT OPTION
- HIGH BEAM, MEDIUM BEAM, FLASH & SOS FUNCTIONS
- USB RECHARGEABLE
- CARRY STORAGE CASE (not shown)
- 4-6 HOURS USAGE FROM ONE FULL CHARGE
- ALUMINIUM
- WEIGHT – 125g



## Technical Details

INPUT VOLTAGE: 100-250V a.c.

OUTPUT VOLTAGE: 3.7V d.c. 500ma.

POWER FREQUENCY: 100 Hz

WATTAGE: 15W

BATTERY DETAILS: Lithium-Ion 1200mAh (included)

## Instructions for Use

Unpack the components carefully. Please check all parts have been removed from the packaging.

## BATTERY INSTALLATION:

- Unscrew the cover and install battery with the positive end (with groove) towards the torch head, then close the lid.



Inserting Lithium-ion battery (included)

# The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400\*, Fax: 01279 756595

[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

\*UK Calls cost around 7 pence per minute plus your telephone company's network access.  
Please check with your telephone supplier.

Or use normal batteries (requires additional part inside the torch)



#### CHARGING BATTERY BEFORE FIRST USE:

- Install the charging battery with the positive end (with groove) towards the torch head, and then replace the cover.
- The battery is pre-charged. Do not charge before first use.
- When the power is low, the red warning light starts flashing as a reminder to recharge the battery.



#### RE-CHARGING:

- Remove the cover from charger socket and plug the charger lead into the torch and the mains adaptor.
- When the charger is plugged into the mains socket, the charger LED will be green.
- Plug the charger into the socket on the torch.
- When charging, the charger LED will be red.
- Once the torch is fully charged, the LED will turn green.
- Always discharge the torch fully before recharging.
- Once fully discharged the battery will take up to 7 hours to re-charge.

#### OPERATION:

- To turn the torch on, press the silver button on the shaft of the torch until it clicks.
- The torch can perform 3 different functions: High beam, low beam, flashing and COB lantern light/SOS function. To switch between the functions, gently press down the silver button.
- To turn off, press the silver button in until it clicks again.
- Once performance reduces, the torch will need to be recharged.

#### WARNING:

- NEVER POINT THE TORCH DIRECTLY TOWARDS YOUR EYES OR THE EYES OF OTHERS.
- DO NOT OVER CHARGE OR CHARGE FOR LONGER THAN 7 HOURS.
- ONLY USE WITH THE TRANSFORMER PROVIDED.
- OR USE WITH SIMILAR RECHARGEABLE BATTERY PROVIDED.

#### BATTERIES:

- Keep batteries away from children and pets.
- Do not mix used and new batteries.

- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.


### Plug wiring (UK & IRELAND)

- This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.
- DO NOT use if the socket outlets in your home or office are not suitable for this product's mains adaptor/ charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.
- DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

### DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	Please ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

