

Digital Talking Watch

L038 v01: 02/09/22

Please read and retain these instructions for future reference

vivadia▶



Dimensions

LENGTH 25CM

WIDTH OF FACE 4.5CM

FITS WRISTS UP TO 22cm

WEIGHT 29g

- BOLD NUMBER DISPLAY SO ITS EASY TO READ
- SPEAKS THE TIME
- HAS STOPWATCH FEATURES
- WATER RESISTANT
- SETTINGS:
- ALARM
- SET WATCH TO HOURLY ANNOUNCEMENTS SO YOU KNOW WHEN AN HOUR HAS PASSED/KNOW WHAT THE TIME IS
- SNOOZE – SNOOZES ALARM FOR 5 MINUTES
- LIGHTWEIGHT FOR A COMFORTABLE FIT

Battery: 1x CR2025 included (not replaceable)

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.



Controls

B1: MODE

B2: MINUTE

B3: HOUR

B4: TALKING

Display

(||:|): Hourly announcement on PM: Afternoon

☞ : Alarm on AL : Alarm in adjustable state

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk


EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

Change mode

Press B1 to change the functional modes according to the following directions. As you change the mode there will be a "Di" sound depending on how often the button is pressed.

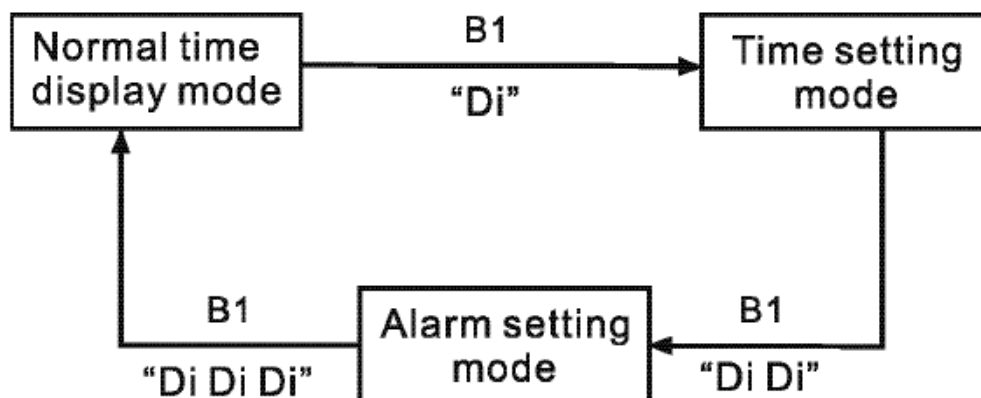

2. Setting the time

Starting from time display mode, press B1 to enter time setting mode.
Press B2, B3 to adjust minutes and hours respectively to the correct time.


3. Setting the Alarm time:

Starting from time display mode, press B1 twice to enter alarm setting mode. AL symbol will display with blinking numerals. Press B2, B3 to adjust minutes and hours respectively to the appropriate alarm time.

4. Activate alarm sound and turn on or off the alarm:

In normal time display, press B3 button to turn on alarm sound. The alarm sound will play and the alarm time is shown on the display. It will then return to the normal time display.
When setting without alarm sound and alarm function is off, it will make a "Di" sound.

5. Turn on/off hourly announcement:

Starting from the display mode, press B2 to activate () or deactivate hourly announcement (no symbol is shown).

6. Snooze function:

When the alarm sounds, press B4 to stop the alarm and start the snooze function. The alarm will sound again every five minutes after the snooze starts. The alarm will sound up to six times.

7. Announce the current time:

In normal time display mode, press B4 button to have current time announced.


MAINTENANCE INSTRUCTION AND NOTICE

1. The watch can withstand water splashing and rain but must not be submerged in water.
2. Avoid wearing the watch in abnormal temperatures.
3. Avoid wearing the watch in an environment with strong electric field, static, or high cycle environment.
4. Keep watch away from petrol, detergent, spraying agent, adhesives and paint.
5. Wipe the watch surface with soft cloth and clear water, do not use chemicals.
6. The watch is made of precision electronic parts. There are no user serviceable parts.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	
Type of Plastic	Polypropylene
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)

