



## Dimensions

(H) 27 x (W) 27 x (D) 4.3cm

- SIMPLE YET ELEGANT
- BIG DIGIT EASY TO READ
- QUARTZ MOVEMENT
- HOUR MINUTE AND SECOND HANDS
- IDEAL FOR PEOPLE LIVING WITH DEMENTIA
- SLIM-LINE – JUST 4CM DEEP

Required: 1x AA battery for movement (not included)

1x AAA for LCD display (not included)

**ALWAYS USE ALKALINE BATTERIES.**

**DO NOT USE LITHIUM BATTERIES.**


## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

### A. TO START CLOCK

Insert 1 x AA 1,5V battery with correct polarity as indicated into clock movement.

### B. ANALOGUE DISPLAY

To set the analogue clock hands, rotate the knob on the reverse of the clock until the clock hands show the correct time.

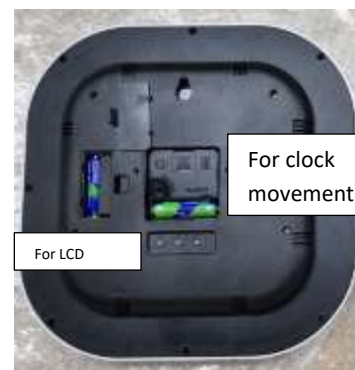

### C. LCD DISPLAY


1. Insert 1x AAA battery, initial default condition: Weekday, Date, Month will be displayed.
2. Press SET key to enter into setting mode, and the year display will start to flash, then press UP / DOWN key to adjust the year value, then confirm the value by pressing the SET key.
3. After confirming the year value with the SET key, the month display will be flashing, then press UP / DOWN key to adjust the month value, then confirm the value with the SET key. Then go to the next functions adjustment with the same operation, the sequence as following: YEAR -> MONTH -> DAY -> 12/24H -> HOUR -> MINUTE. After confirming the Minute setting, it will go back to the default display "Weekday, Date, Month" with the set value.
4. Under the normal display: press DOWN key to switch to the TIME display for 5 seconds.
5. The LCD display will return to its default display after 30 seconds of inactivity.

Notice: If display becomes faint, please replace the battery.

## BATTERIES

**ALWAYS USE ALKALINE BATTERIES.  
DO NOT USE LITHIUM BATTERIES.**

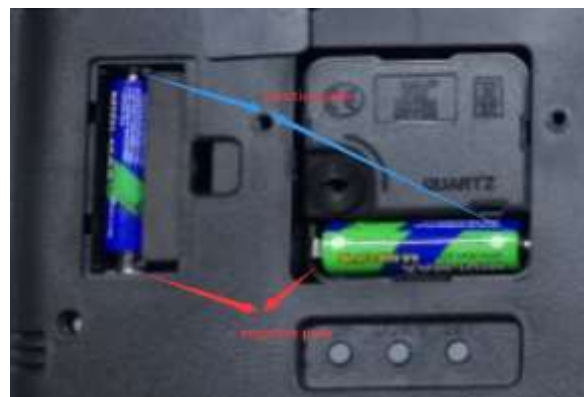

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.



## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol		
Type of Plastic	Polypropylene	Polystyrene
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	Insulation boxes, water cups, protective packaging inserts, take away containers
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)	Not commonly recycled but waste management centres will recycle it.

