Portable Vacuum Callus Remover

L401 v01: 24/10/22

Please read and retain these instructions for future reference





Dimensions


9.5 x 6.5cm

- RECHARGEABLE CALLUS REMOVER
- BUILT IN VACUUM
- USB RECHARGEABLE
- 2 SPEEDS.
- INCLUDES EMERY PAD AND BUFFING PAD
- INCLUDES USB CHARGING CABLE

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Parts

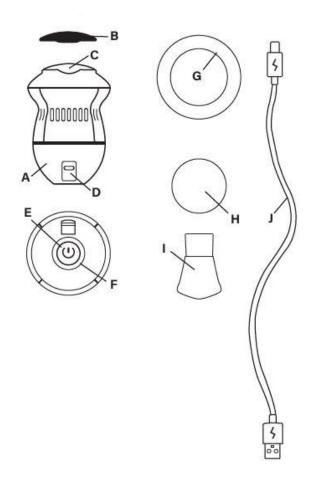

- A. Portable Vacuum Callus Remover
- B. Emery Pad Cover
- C. Emery Pad
- D. Charging Port
- E. Power Button & Low/High Selection
- F. Battery Indicator & Speed Light
- G. Circular Sponge Filter
- H. Buffing Pad
- I. Emery Pad Cleaning Brush
- J. USB Charging Cable

Power connection:

Insert the USB receiver into the energizing port and plug the other end into the power port.

This product is suitable for general USB interface line, which can be connected to mobile power supply, computer, ordinary and vehicle-mounted power supply, etc.

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk
EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France
Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access. Please check with your telephone supplier.

Portable Vacuum Callus Remover L401

Instructions for Use

Please read and retain these instructions for future reference

v001: 24/10/22

How to Use


Start by removing the Emery pad cover by lifting it up on one side (Fig. E).


Plug into the micro-USB connector end of the supplied USB cable into the charging port of the Callus Remover (Fig. A). Plug the other end of the USB cable into a USB wall adapter, then plug the adapter into a wall socket.


Turn on the Vacuum Callus Remover by holding down the power button for 2 seconds (Fig. B).

After turning on the unit is in low speed. To increase the speed to high, click the power button once more.

To turn off the Vacuum Callus Remover hold down the power button until the light turns off.

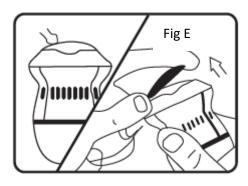


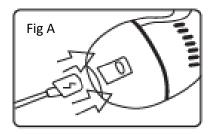

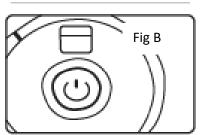

Warning Do not immerse the unit in water or allow water an Vacuum Callus Remover is not waterproof. Store in a dry place.

Holding the Callus Remover securely, gently press the emery pad to to remove and slowly move outwards towards healthy skin (Fig. G). Check intermittently for desired results. Once new, healthy skin is re and switch the unit off.

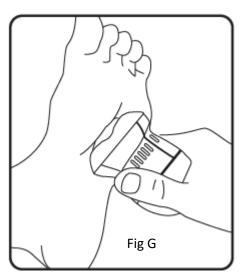

Please read and retain these instructions for future reference

How to clean

- 1. Remove the emery pad and clean it by running under warm
 - Allow the emery pad to air dry. Do not attempt to clean the main unit by running it under water. To clean the main unit wipe it down with a soft damp cloth.
- 2. Once emery pad is removed turn the Callus Remover cover anticlockwise to open the shavings chamber (Fig. I).
- 3. Slowly remove the circular sponge filter from the chamber. Rinse the filter with warm water and allow to air dry.
- 4. Clean the remaining skin shavings out of the chamber with the shavings remover brush provided (Fig. J).
- 5. Once the chamber is fully cleaned, replace the circular filter, shavings chamber cover and emery pad securely.

For best performance, clean the Portable Vacuum Callus Remover after each use.



- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags this is made from the following



recyclable plastic.(ABS) OTHER





