

Electronic Keyboard with Stand

L780 v001: 15/05/23

Please read and retain these instructions for future reference

BERGSTRÖM



Dimensions

Keyboard: 80 x 26.5 x 7.6cm

Stand: 71 x 32 x 4.5cm

Material: Plastic, iron

Power lead length: 1m

Microphone lead length: 70cm

Power Details: 4x AA Batteries
Not Included

Accessories: Adaptor, microphone

**ALWAYS USE ALKALINE BATTERIES.
DO NOT USE LITHIUM BATTERIES.**



Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Electronic Keyboard with Stand.

User Instructions

Unpack the components carefully. Please check all parts have been removed from the packaging.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ANY APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE.
- NOT FOR COMMERCIAL USE.

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0330 331 0300 Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- DO NOT LEAVE SWITCHED ON OR UNATTENDED.

 
BATTERIES

- **ALWAYS USE ALKALINE BATTERIES. DO NOT USE LITHIUM BATTERIES.**
- INSTALL BATTERIES IN ACCORDANCE WITH ITS POLARITY SYMBOLS. DO NOT FIT BATTERIES IN REVERSE.
- ENSURE THE BATTERY COMPARTMENT IS RE-SECURED BY THE SCREW OR SECURING DEVICE.
- DO NOT SHORT CIRCUIT THE BATTERY TERMINALS.
- REMOVE THE BATTERIES IF LEFT FOR LONG PERIODS.
- **KEEP BATTERIES AWAY FROM CHILDREN AND PETS.**
- IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.
- DO NOT MIX USED AND NEW BATTERIES.
- **NEVER DISPOSE OF BATTERIES IN A FIRE.**
- BATTERY DISPOSAL, SPENT OR EXPIRED BATTERIES MUST BE DISPOSED OF AND RECYCLED IN COMPLIANCE WITH YOUR LOCAL AUTHORITY REGULATIONS.
- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.


ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Assembling the stand

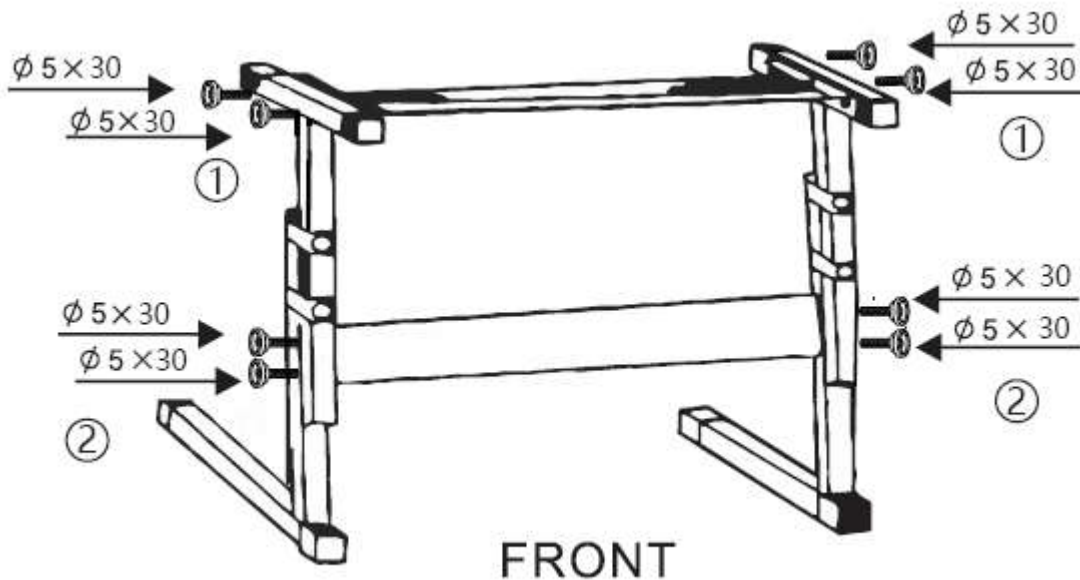


 ④ Connecting the screw hole position at the bottom of the piano body

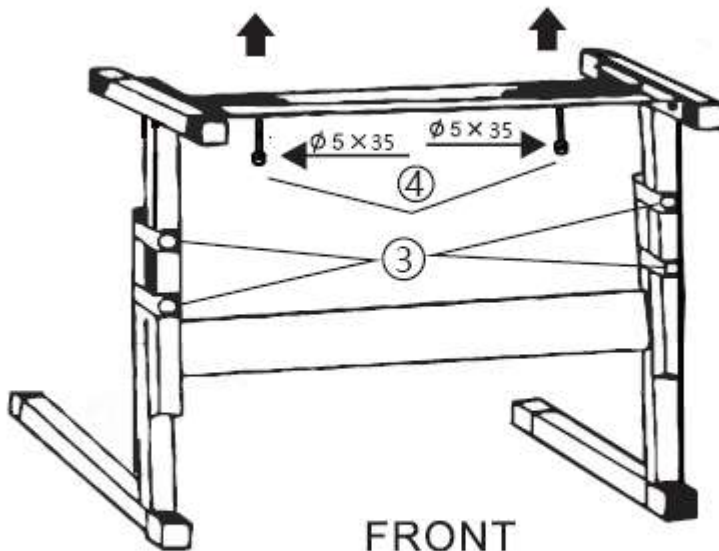

③ Adjust the limit screw at the same time on the left and right sides to adjust the appropriate height

Electronic Keyboard

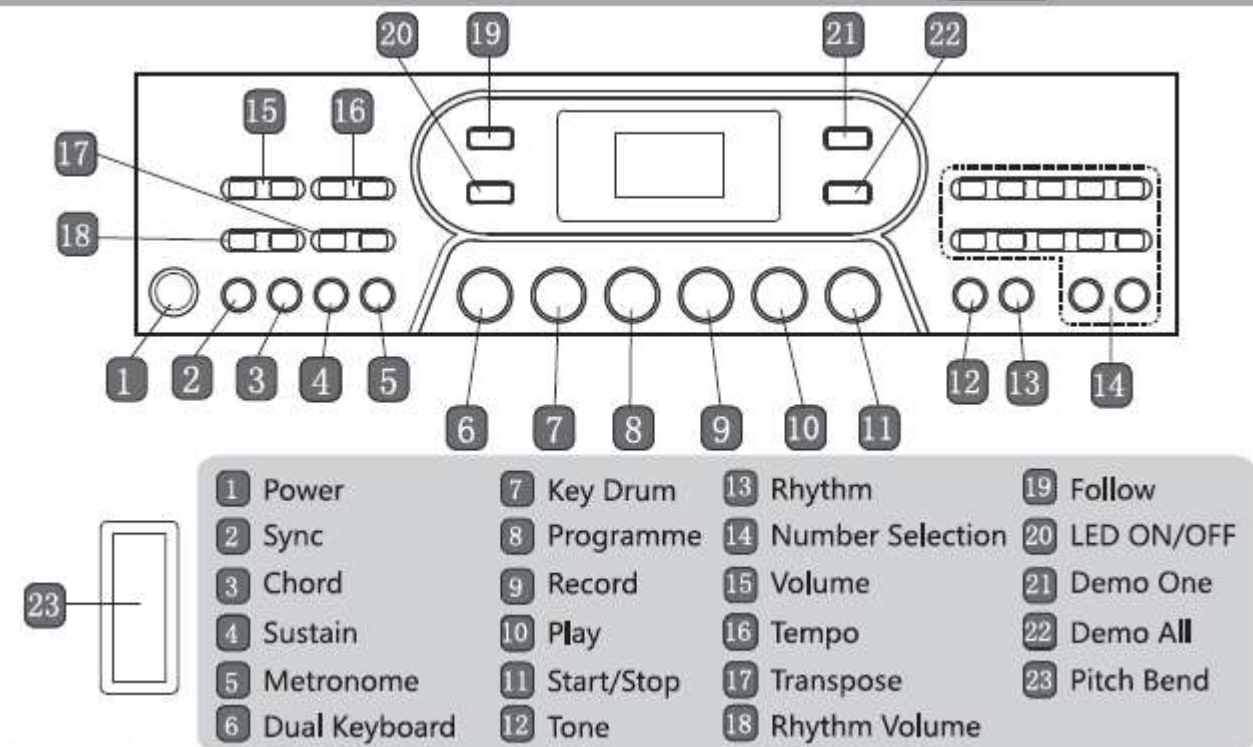

1. Power

Press Power button into playing Electronic Keyboard Mode.

2. Sync

- Press SYNC to start SYNC function, LED show Syn.
- When no rhythm has been played previously, press this Sync button for the rhythm synchronization function and then press one of the first 19 keys on the keyboard, it will play the selected rhythm automatically.
- During rhythm playback, press this button to enter sync mode and stop playing rhythm.

3. Chord

- Press CHORD button into Chord Mode.
- This button only works in Rhythm and General Mode.
- During rhythm play mode, the user presses the button and the key in the range C3-F4 on the keyboard.

- Chord can be used with rhythm/chord/synchronously.

4. Sustain

- Press the SUSTAIN button to turn the sustain function on or off. The LED will display "SuS".
- When the sustain function is turned on, tones will be extended when you play the keyboard.

5. Metronome

- Press Metronome button in 4 change. Beat Sound 1/4-2, 4-3/4-4/4-STOP-1/4...
Default tempo is 120.
- Four gradual change for Metronome, 1/4 – 1-2-3/4-4/4.
- Display 1/4 -1-2/4-3/4-4/4.

6. Dual Keyboard

- Dual Keyboard for on/off function.
- Press the Dual keyboard button, the keyboard on the C3-B4 scale will correspond to C4-B5, on C5-C8 scale will correspond to C4-C7.
- Replace the original timbre of C4-C7 keyboard by using number to select primary timbre.

7. Key Drum

Press this button to get the corresponding percussion sound on the corresponding key.

8. Programme

- Press (PROG) to enter programming mode, the default speed is 120, LED will display "prg".
- In this mode, the key will automatically switch to key drum.
- The maximum of 32 notes can be recorded. If you press 33 times, the 33rd note cannot be recorded as the memory is full. Press the PLAY button to play the programmed sound of the drum.
- Every time the PROG button is pressed, the last program will be cleared and programming mode re-entered.

- After exiting recording, the last record will be cleared.

9. Record

- Press (RECORD) to enter the recording mode, and then press any key or drum key to start recording. LED will display "REC".
- The maximum number of recording is 85, when the memory is full, nothing further can be recorded. Press the PLAY button to play the record.
- Every time the RECORD button is pressed, the last record will be cleared and recording mode recommences. After exiting recording mode, the last record will be cleared.

10. Play

- Press Play (Record) to play recorded notes and percussion sounds, and play them in the selected sound of the recording at the time. LED will display "PLA".
- Play (Programme) to play recorded drum sound, and repeat the play. LED will display "PLA".
- If you press this button when nothing has been recorded previously, nothing will be played.

11. Start/Stop

- Press this button to start rhythm directly.
- This will stop Teaching/Recording/Programme/Playing Demo/Metronome under Learning Mode.

12. Tone

- Press the TONE button to select from the number selection to choose Tone.
- The input number is from 0 to 199. The input must be within the range.

13. Rhythm

Press Rhythm button then press STOP/START into Rhythm mode, using the number selection to choose.

The input number is from 0 to 199. The input must be within this range.

14. Number Selection

- Total 12 Keys 0-9, + and –
- Press “+” or “-” for 2 seconds to continuously increase/decrease options.
- If Tone/Rhythm Mode is selected, Tone is default after Power on.

Every times that you want to change to other tones or rhythm, you should press button TONE or RHYTHM on the keyboard(see picture) first and then press button 0-9 to select tones and rhythm that you want. If the tones is 1 now, and you want to change the tone from 1 to 58, you should press button TONE, then press 5 and 8 successively. Or you can also press button +SELECT 57 times until the LED screen showed 58. If you press button +SELECT 200 times, the original tone 1 will be kept.



15. Volume

- Press Volume + (or -) to increase/decrease the volume of the keyboard.
- 17 volume controlling in total (Display: 00-16), default at 13th.
- Keep pressing volume +/- up to two seconds to keep increasing/decreasing volume.
- Turn back to default volume by pressing volume + and – button at the same time.

16. Tempo

- Press two buttons to control the tempo speed.
- The Tempo control has 210 segments and the tempo range is 30-240. Press Tempo and +/- to increase/decrease the tempo.
- In normal power-on mode, the default tempo displayed is 120.
- When playing the selected song, it will be based on the tempo of the song, regardless of the default tempo.
- When playing the selected rhythm, it will be based on the set tempo.



- Keep pressing Tempo +/- up to 2 seconds to keep increasing/decreasing speed.
- While playing the song, press and hold the Tempo +/- button at the same time, the speed returns to the initial tempo of the song.
- While playing the tempo, keep pressing the Tempo +/- button, the speed returns to the initial tempo of the rhythm itself.

17. Transpose

- Press two buttons to control Transpose, press Transpose and +/- to increase/decrease it.
- There are 13 segments (Display: -6 -6) in Transpose, default value is 7th (Display: 0)
- Keep pressing Transpose +/- up to two seconds to keep increasing/decreasing Transpose.
- Turn back to default volume by pressing Transpose + and – button at the same time.
- Chord will also change.

18. Rhythm Volume

- (Rhythm Vol) button control is used to control the rhythm volume.
- Press (+) button means turning up the volume. Press (-) button means turning down the volume.
- There are 16 sections of the rhythm volume (1-16), the initial default volume is 12 after powering.
- Keep pressing Rhythm Volume (+) and (-), the volume will change to the initial default volume.

19. Follow

- Press Follow mode to play a song without the main melody. The user must press the corresponding white or black keyboard to continue playing the melody.
- The background sound is repeated to play the bar until the song is over.
- After the song is over, the same song can be repeated.



- Under follow mode you are automatically in song select mode. Exiting follow mode will continue select song mode.
- When playing song, pressing TONE will change into tone select mode for 3 seconds and will then return back to song select mode.

20. LED ON/OFF

This button can turn on/off the lights of white and black keyboard. The default is on.

21. Demo One

- Press Demo One on the keyboard to play a song in demo mode first time. To play the next song, press DEMO ONE again.
- After the song has finished playing and you do not press the button Demo Mode, the current song will be repeated.
- Under Demo One mode you are automatically into song select mode. When exiting Demo One mode Select Song Mode will continue.
- When playing song, pressing TONE will change into tone select mode for 3 seconds and will then return back to song select mode.

22. Demo All

- Press Demo All into demo mode to enter mode. Press a second time to exit.
- Enter Demo mode, will play the first demo song.
- Under Demo all mode you are automatically in song select mode. Exiting Demo All song select mode will continue.
- When playing a song, pressing TONE will change into tone select mode, after 3 seconds Song Select mode will be entered.

23. Pitch Bend

Push the Pitch Bend button up and down, and the key tone changes up and down.

⚠ Warning

Please follow the following steps if the keyboard starts fuming or overheats.


1. Power off.
2. If you are using the adaptor, remove the adaptor from the power socket.
3. It is normal for the adaptor to get hot when it is used for longer periods of time.
4. Please power off and restart the keyboard.

Battery operation

The Electronic Keyboard can be powered by either mains adaptor or batteries. For battery operation remove the screw and battery cover.

Insert the batteries with correct positive+ and negative - direction into the battery slot with 4x AA 1.5V batteries.

Replace the battery compartment cover and screw.

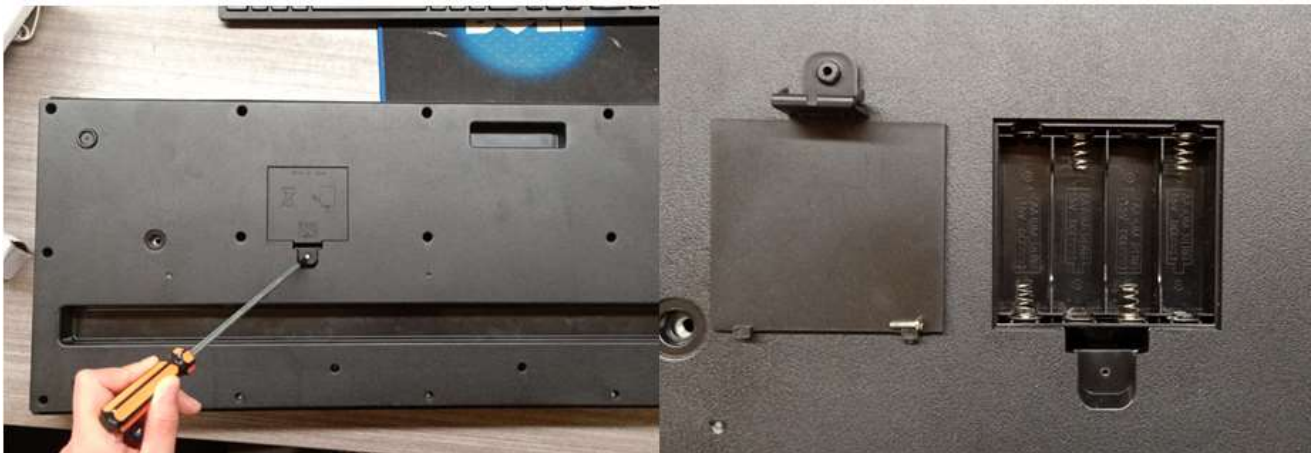**PLUG WIRING (UK & IRELAND)**

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use if the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.




DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

CARE AND CLEANING INSTRUCTIONS

- ALWAYS SWITCH OFF AND REMOVE BATTERIES BEFORE CLEANING.
- DO NOT IMMERSE IN WATER.
- DO NOT USE ABRASIVE CLEANERS OR SHARP UTENSILS TO CLEAN THIS APPLIANCE.
- WIPE SURFACES WITH A SOFT DRY CLOTH. DRY THOROUGHLY BEFORE FURTHER USE.
- STORE THE APPLIANCE IN A COOL, DRY PLACE.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.

Code & Symbol	
Type of Plastic	Polystyrene



CUSTOMER SERVICES:

Customers in GB (England, Scotland and Wales), please contact our customer services -
UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU, Tel: 0330 331 0300

Customers in Northern Ireland and Europe, please contact our customer services -
D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France, Tel: (+44) 1279 701269

24. Appendix 1 (Tone List)

T000	Acoustic Grand Piano	T071	Bright Acoustic Piano 1	T142	Shanai 2
T001	Bright Acoustic Piano	T072	Synth Bass 1	T143	Dulcimer 3
T002	Electronic Piano 2	T073	Acoustic Guitar (Nylon)	T144	English Horn 2
T003	Music Box 1	T074	Shanai 1	T145	Electronic Guitar (Clean) 3
T004	Church Organ	T075	Pedal Harp	T146	Shamisen 2
T005	Electronic Guitar (Clean) 1	T076	Synth Tone 4	T147	Koto 3
T006	Distortion Guitar	T077	Sehtar	T148	Kalimba 2
T007	Acoustic Bass	T078	French Horn	T149	Steel Bell 1
T008	Violin	T079	Black Clarinet	T150	Tenor Sax 2
T009	Orchestral Harp	T080	Reed Organ 1	T151	Woodblock 2
T010	String Ensemble 1	T081	Clavi 1	T152	Synth Harpsi. 1
T011	Trumpet	T082	Baritone Sax	T153	Attack Clav. 1
T012	Tenor Sax 1	T083	String Ensemble 5	T154	Crystal
T013	Clarinet	T084	Soft Piano	T155	Bag Pipe 2
T014	Synth Vocal 1	T085	Science Fiction	T156	Barafon
T015	Synth Tone 3	T086	Irish Harp	T157	Organ Flute
T016	Synth Effect 3	T087	Electronic Guitar 1	T158	Kalimba 3
T017	Sitar	T088	Sitar 1	T159	Reed Horn
T018	Kalimba	T089	Big Pipe	T160	Hard Vibe 2
T019	Shanai	T090	Soft Guitar	T161	Twin Bones
T020	Bright Violin	T091	Electronic Piano 5	T162	Synth Harpsi. 2
T021	Bass Harp	T092	Square	T163	Attack Clav. 2
T022	Slide Guitar	T093	String Ensemble 6	T164	Chorus Guitar.
T023	Electronic Bass (Fingar)	T094	Vibraphone	T165	Steel Bell 2
T024	Rock Organ	T095	Kalimba 2	T166	Tsugaru
T025	Electronic Guitar (.Jazz)	T096	Muted Trumpet	T167	Oct Harp
T026	Rhodes Piano	T097	Synth Bass 2	T168	Bodhran
T027	Celesta 1	T098	Shanai 2	T169	Tubular Bells 2
T028	Horizontal Piano	T099	Synth Tone 5	T170	Suona
T029	Soft Grand Piano	T100	Jungle Bass 1	T171	Gastanets
T030	Bass Kalimba	T101	Pi Pa 1	T172	Attack Harp 1
T031	Taiko Drum	T102	Feedback Gt.	T173	Electric Vibraphone
T032	Synth Effect 2	T103	Uilleann Harp	T174	Soft Sax 1
T033	Bright Sitar	T104	Jazz Bass	T175	Soft Clav.
T034	Synth Vocal 2	T105	Flugel Horn	T176	Soft Guitar 1
T035	Synth Tone 2	T106	Muted Horn	T177	Grow Guitar
T036	Alto Sax	T107	Wood Barafon 1	T178	Didgeridoo 1
T037	Oboe	T108	Electronic Piano 3	T179	Attack Barafon
T038	String Ensemble 2	T109	Multi Reed	T180	Mute Barafon 1
T039	rombone	T110	Guitar Pinch 1	T181	Nay
T040	Crystal	T111	Multi Wind	T182	Soft Santur
T041	Electronic Piano 3	T112	Clavi 2	T183	Dual Horns 1
T042	Synth Bass	T113	Celesta 2	T184	Hard Barsoon 1
T043	Overdriven Guitar	T114	Harpsichord 2	T185	Tron Flute
T044	Tuba	T115	Mellow Fm	T186	Kawala 1
T045	Synth Harp	T116	Pi Pa 2	T187	Jazz Organ
T046	Synth Tone 1	T117	Upright Piano	T188	Soft Accord
T047	Bright Clarinet	T118	Electronic Piano 4	T189	Wind Organ
T048	Bass Shanai	T119	Hard Vibe 1	T190	Viola Attack
T049	India Sitar	T120	Wood Barafon 2	T191	Bari & Tenor
T050	Electronic Piano 1	T121	Music Box 2	T192	Soft Sax 2
T051	Soft Electronic Piano	T122	Marimba 2	T193	Attack Harp 2
T052	Electronic Guitar (Muted)	T123	Santur	T194	Didgeridoo 2
T053	Accordion	T124	Reed Organ 2	T195	Dual Horns 2
T054	String Ensemble 3	T125	Puff Harmonica	T196	Hard Barsoon 2
T055	Cello	T126	Ukulele	T197	Kawala 2
T056	Synth Vocal 3	T127	12-str. Gt	T198	Soft Guitar 2
T057	Soprano Sax	T128	Guitar Pinch 2	T199	Mute Barafon 2
T058	Kalimba 1	T129	Slow Violin		
T059	Synth Effect 1	T130	Bright String		
T060	Bright Sax	T131	Jungle Bass 2		
T061	String Ensemble 4	T132	Indian Flute		
T062	Synth Effect 4	T133	Clavi 3		
T063	Synth Vocal 4	T134	Celesta 3		
T064	Fiddle	T135	Church Bells		
T065	Africa Kalimba	T136	Marimba 3		
T066	Percussive Organ	T137	Dulcimer 2		
T067	Soft Electric Guitar	T138	Reed Organ 3		
T068	Synth Piano	T139	Electronic Guitar (Clean) 2		
T069	Electronic Piano 4	T140	Koto 2		
T070	Classical Music Box	T141	Xylophone 2		

25. Appendix 2 (Rhythms List)

R000	Rumba	R049	Indigenous Cha Cha	R098	Latin Salsa	R147	Hully Gully 2
R001	Samba	R050	Classical Tango	R099	Classical Swing	R148	Jive
R002	Tango	R051	Jazz Rumba	R100	China Style	R149	LoveSong
R003	Boogie	R052	Indigenous Polka	R101	Slow Rock	R150	Medium Jazz
R004	Pop Rock	R053	India's Indigenous	R102	Slow Rock 2	R151	Modern Country Pop
R005	Latin	R054	Single 16 Beat	R103	Slow Waltz	R152	Modern R&B
R006	Hully Gully	R055	Mixed Bossanova	R104	70's Soul	R153	Pasodoble
R007	Disco	R056	Indigenous Slow Rock	R105	Straight Rock	R154	Samba1
R008	Bossanova	R057	Country Jazz	R106	Techno	R155	Samba2
R009	Waltz	R058	Brazil Momo	R107	Mambo 2	R156	Schlager Rock
R010	16Beat Pop	R059	Europe 8 Beat	R108	Country 2	R157	SchlagerAlp
R011	Rock'N Roll	R060	Classical Country	R109	8Beat Adria	R158	Tarantella
R012	Country	R061	16Beat Shuffle	R110	Big Band Shuffle	R159	Tijuana Waltz
R013	Reggae	R062	Jazz 8 Beat	R111	Big Band middle 1	R160	Electro Pop
R014	Soul Rock	R063	Classical Slow Rock	R112	Big Band middle 2	R161	Fusion
R015	Swing	R064	Tricks Bossanova	R113	Big Band Fast 1	R162	Hip Waltz
R016	8 Beat	R065	Tricks Mambo	R114	Big Band Fast 2	R163	Limbo Rock
R017	Cha Cha	R066	Indonesian Pop	R115	Bolero	R164	Acoustic Ballad
R018	Mambo	R067	South Africa Polka	R116	CatGroove	R165	Piano Ballad
R019	Caribbean Dance	R068	Classical Rumba	R117	ClassicPianoBld	R166	R&B Ballad
R020	Country Bossanova	R069	Brazilian Tango	R118	Cumbia	R167	Rock Ballad
R021	Classical Waltz	R070	Rock Boogie	R119	Funky Disco	R168	Reggae 2
R022	Ober Polka	R071	Jazz Samba	R120	Latin Waltz	R169	Slow&Easy
R023	European disco	R072	Classical Disco	R121	Ober Polka	R170	Swing Waltz
R024	Latin Rock	R073	Jazz Latin	R122	TUnplugged	R171	Pub Piano
R025	8beat Soul	R074	Indigenous Salsa	R123	Blue Grass 1	R172	Jazz BigBand
R026	Indigenous Tango	R075	Argentina Waltz	R124	Blue Grass 2	R173	Jazz Club
R027	Indigenous Boogie	R076	Indigenous Swing	R125	Blue Grass 3	R174	Jazz Waltz1
R028	Europe Rumba	R077	Jazz Cha Cha	R126	Saturday Night	R175	Jazz Waltz2
R029	Classical Samba	R078	European Rock	R127	Pop Ballad	R176	Jazz Rock
R030	Pop Mambo	R079	Indigenous Reggae	R128	Slow Soul	R177	Salsa
R031	Fanatical Sand	R080	Indigenous	R129	Bright Pop	R178	Analog Ballad
R032	8beat Pop	R081	Indigenous Rumba	R130	Club Latin	R179	Show Tune
R033	Brazil Cha Cha	R082	Indigenous Country	R131	Disco Chocolate	R180	68 Beat Blues
R034	Country Slow Rock	R083	Jazz Bossanova	R132	Disco Fox	R181	16 Beat Ballad
R035	Jazz Swing	R084	Europe Samba	R133	Disco Funk	R182	68 BeatBallad
R036	South Africa Country	R085	Classical 8 Beat	R134	Disco Hands	R183	Big Band Ballad
R037	Pop Reggae	R086	Pop Waltz	R135	Disco Latin	R184	West Shuffle
R038	Clup Pop	R087	Tricks Latin	R136	Disco Party	R185	Calypso
R039	Lytic Rock	R088	Country Cha Cha	R137	Disco Samba	R186	Casa
R040	Classical Boogie	R089	Classical Reggae	R138	Dixie Jazz	R187	Christon
R041	Rock Samba	R090	Jazz Polka	R139	Pop New Age	R188	Detroit
R042	Rock Disco	R091	Jazz Tango	R140	Uk pop	R189	Dance Pop
R043	Brazil Latin	R092	Jazz Slow Rock	R141	USA March	R190	Espag No1
R044	Single Rock	R093	Jazz 16 Beat	R142	Club Dance	R191	Fast Gospel
R045	Country Waltz	R094	Jazz Boogie	R143	Rumba 2	R192	Ground Beat
R046	Europe Swing	R095	Jazz Bo	R144	8Beat Modern	R193	Guad Dance
R047	Europe Reggae	R096	Indigenous Rock	R145	Country Ballad	R194	Modern Cha Cha
R048	Rock Salsa	R097	Jazz Disco	R146	Hard Rock	R195	Merengue
						R196	Pasodobl
						R197	Rave
						R198	Sy Boogie
						R199	Seville

26. Appendix 3 (Demo music List)

D00	Childhood	D24	Jasmine	D48	Les premiers Sourires De Vanessa
D01	Small Apple	D25	Backgammon	D49	Frosty The Snowman
D02	It Is Better To Dance	D26	Birch Forest	D50	The Never Ending Story
D03	Grandma's Penghu Bay	D27	Free To Fly	D51	Birthday Song
D04	Sweet Honey	D28	Nanni Bay	D52	Jingle Bells
D05	Kangding Love Song	D29	Little Swallow	D53	My Heart Will Go On
D06	The Most Dazzling National Style	D30	Sky Road	D54	Twinkle Twinkle Little Star
D07	Ging Zang A Plateau	D31	Little Donkey	D55	Are You Sleeping
D08	My China Heart	D32	Happy New Year	D56	Marry Had A Little Lamb
D09	Love Will Win	D33	Unfortunately, Not You	D57	Old McDonald Had A Farm
D10	A Long Distance Away	D34	Xing Xing Dian Deng	D58	Bee
D11	Ten Thousand Reluctant	D35	Kiss Goodbye	D59	Fur Elise
D12	This Life Is Destined	D36	Full Moon	D60	Marriage D' amour
D13	Not Afraid Not Afraid	D37	Yesterday Once More	D61	I Will Always Love You
D14	Lifetime With You	D38	Only You	D62	Turkish March
D15	Mother Said	D39	Rhythm Of The Rain	D63	Canon
D16	The Forest In Norway	D40	Ode To Joy	D64	Mozart Piano Sonata
D17	Sudden Self	D41	Ballade Pour Adeline	D65	She' ll Be Coming Around The Mountain
D18	Love If You Die	D42	Spanish Bull Dances	D66	Donna Donna
D19	Cut Plum	D43	If You Are Happy	D67	Yankee Doodle Dandy
D20	I Only Care About You	D44	It Is A Little World	D68	Reality
D21	Alishan Girl	D45	Cow Boy	D69	Beauty And The Beast
D22	About Winter	D46	London Bridge		
D23	Liang Zhu	D47	Long Long Ago		