



Power Details: 220-240V A.C.
700 W
50/60 Hz.



Caution
Hot surface

CAUTION! THIS ELECTRICAL APPLIANCE'S EXTERNAL SURFACES WILL GET HOT IN NORMAL USE. ALLOW TO COOL BEFORE TOUCHING THE EXTERNAL SURFACES. USE OVEN GLOVES WHEN OPENING THE LID AND WHEN REMOVING COOKED FOOD.

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Omelette Maker.

Features of your Omelette Maker:

- Easy-clean non-stick coating for easy removal of omelettes.
- Red indicator light which switches off once the Omelette Maker has reached the correct temperature.
- Non-skid feet for stability.
- Cool touch handle.

Using your Omelette Maker:

- Before use, remove any promotional labels and wipe the cooking plates down with a damp cloth, then wipe dry.
- Brush the wells in the cooking plates with oil.
- Close the Omelette Maker.
- Plug the Omelette Maker into a 220-240 volt power outlet and switch the power on.
- The indicator light will illuminate. When the indicator light switches off, the Omelette Maker is ready for cooking.
- Lightly whisk eggs in a large bowl with a hand whisk, until an aerated mixture is produced. If filling is required in the omelettes, cut the filling of your choice into suitable sized pieces.

- If the filling pieces for your omelette require cooking, then place them in the cooking wells to cook as appropriate. If the filling pieces do not require cooking, mix and pour into the omelette maker with the egg mixture.
- If you are making one omelette then use 2 eggs to make your omelette mixture and pour into one of the cooking wells. When filling ensure the mixture does not fill above the maximum level.
- If you are making two omelettes then use 4 eggs to make up your omelette mix and pour into both cooking wells. When filling ensure the mixture does not fill above the maximum level.
- The indicator light will switch off when the Omelette Maker is at the correct temperature.
- Close the lid and allow the omelettes to cook for eight to nine minutes.
- If the Omelette Maker has been filled as indicated, the upper lid will lift slightly as the omelettes reach the end of the cooking cycle.
- When the lid lifts slightly, continue cooking for around 30 seconds to achieve the best results.
- Open the Omelette Maker lid and remove the omelettes with a plastic spatula (not included). Do not use metal utensils as they will damage the non-stick coating.

Maintaining your Omelette Maker:

- Switch off at the power outlet and then unplug.
- Allow the appliance to cool down slightly before cleaning.
- The appliance is easier to clean when slightly warm.
- Always clean the Omelette Maker after each use to prevent a build-up of baked-on foods.
- Wipe cooking plates with a damp cloth. If cooked on food is not removed by this method, brush with a little oil or melted butter. Allow to stand for five minutes and then wipe with a damp cloth.
- Warning! Do not immerse the Omelette Maker, power cord or plug in water or any other liquid.
- If a lot of residue build up occurs, spray with a little lemon juice and wipe with a damp cloth. The acid will assist with the removal of the residue.
- DO NOT use abrasive cleaning products or cloths as this will damage the non-stick coating.

WARNING

- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- KEEP THE APPLIANCE AWAY FROM CHILDREN.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE, IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING THE SAFE USE OF THE APPLIANCE AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHOULD NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- DO NOT PLACE THIS ITEM IMMEDIATELY BELOW A SOCKET-OUTLET.
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC.


- DO NOT USE IF THE POWER CORD OR PLUG IS DAMAGED. IT MUST BE REPAIRED BY A QUALIFIED ELECTRICIAN OR REPLACED BY THE MANUFACTURER, SERVICE AGENT OR SIMILARLY QUALIFIED PERSON, IN ORDER TO AVOID A HAZARD.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

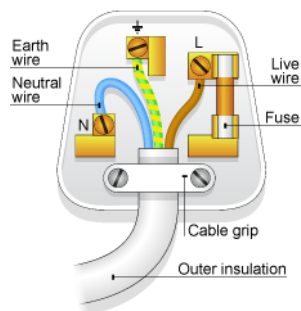

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

