

## Save energy and electricity

These remote control sockets enable you to turn your appliances on and off remotely. It saves you time, effort electricity and money.

The remote control sockets are great for hard to reach sockets under furniture or behind TV's and microwaves.

### Setting up:

- Your pack contains 3 sockets (receivers) and 1 remote control.
- Insert 1x 23A/12V alkaline battery (not included) into the battery compartment of the remote control
- Plug the sockets into a desired power outlet.
- The remote control has three group buttons with numbers 1, 2 and 3. The three receivers also have a number on each, '1' on receiver 1, '2' on receiver 2 and '3' on receiver 3. So button 1 on the remote control, controls receiver 1, button 2 controls receiver 2 and button 3 controls receiver 3.
- To turn on any of the receivers simply press the 'On' button under the corresponding number on the remote control.

Please read carefully before use and retain for future reference.

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400 Fax: 01279 756595 www.coopersofstortford.co.uk



• To turn off any of the receivers simply press the 'Off' button under the corresponding number on the remote control.

# **Trouble Shooting:**

If the socket does not respond to the remote control please check the following:

- The battery may be low. Check the battery and replace if necessary.
- The distance between the remote control and receiver may be too great, the maximum transmitting distance is 30 metres. Move the remote closer to the receiver if the distance is greater.

### WARNINGS!

- For indoor use only.
- Do not exceed the maximum load current of 10A.
- Avoid exposing to high temperatures, sunlight or moisture.
- Do not use the receivers together via the same power socket.

## EC DECLARATION OF CONFORMITY

We the Enterprise Department Ltd of 11 Bridge Street, Bishops Stortford, Hertfordshire, UK, CM23 2JU in accordance with the following Directives:

### EMC & The R&TTE Directive 1999/5/EC

EN 300 220-2 V2.4.1 EN 301 489-1 V1.9.2 EN 301 489-3 V1.4.1 EN 62479: 2010

### The Low Voltage Directive 2006/95/EC

EN 61058-1:2002+A2:2008 BS 5733:2010 EN 61058-1:2002+A2:2008

### **ROHS Directive 2011/65/EU**

hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications. The unit complies with all applicable Essential Requirements of the Directives.

Mr. Stuart Fowler Imports Director June 2014

Please read carefully and retain for future reference.

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400 Fax: 01279 756595 www.coopersofstortford.co.uk



### Packaging

- Dispose of packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags at your local recycling centre.
- Dispose of item at the end of its lifespan at your local authorised household waste recycling centre



Not to be disposed of With other household waste

Please read carefully before use and retain for future reference.

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400 Fax: 01279 756595 www.coopersofstortford.co.uk

