

Assembly Instructions Tenby Arbour

Code: 25222



 $(W \times D \times H)2.07m \times 0.85m \times 2.07m$



ONLINE ASSEMBLY VIDEO AVAILABLE Please scan the QR code or visit zestoutdoorlivingsupport.co.uk



PLEASE KEEP THESE INSTRUCTIONS





Every Zest product is unique because each piece of timber has its own distinctive, natural features.

Zest sources all of its timber from responsibly-managed forests everything it designs and produces meets the highest standards of sustainability. Zest ensures that all timber and timber-related products are certified to Forestry Stewardship Council (FSC®).

This is vital not only for the health of the planet, but also shows Zest's commitment to the environment and to responsible sourcing. Timber is a natural material and, as such, will fit beautifully within any outdoor space. This also means that all Zest pieces are unique because every piece of timber has its own distinctive features.

Natural and Unique...

Changes in temperature and humidity will cause expansion and contraction so Zest products need time to adjust to where the owners live. A few splits or cracks are part of the maturing process and will not affect strength or durability. Knots embedded in the wood are natural and tell the story of the tree which made them. Customers may notice variations in colour but, once out in the garden and exposed to the sun, colour and shading will even out.

Most Zest products are pressure treated which protects the timber from rot and means customers will be able to enjoy the products in their garden for many years.

Fresh pressure treatment sometimes leads to a small amount of greenspotting on the surface of new timber as the natural salt leaves the wood. This will fade away over time and is in no way detrimental to quality or durability.

Splits and cracks occur naturally in the timber grain due to changing temperatures and humidity levels. They are not usually a cause for concern as they don't affect the strength or durability of the product. If however, a 2p coin can fit into the split or crack there may be an issue so it should be reported to the retailer in writing with photographic evidence.



The benefits of slow grown timber

Slow grown timber from Eastern Europe is ideal for timber garden furniture. It produces a stronger grain in the wood giving it more durability and is said to be as strong as some hard woods.






Normal splits are characteristics of timber.



Knots are characteristics of timber



will fade over time when items are placed outdoors.

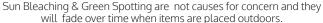

Should you find a large split or dead knot, please email a photo to your retailer for investigation.

Tenby Arbour Assembly Instructions

Requires: 2 person assembly.

Tools required: Corded / cordless drill, 3 mm drill bit as all screw holes need to be predrilled, Pozi drive bit / Screwdriver (*Crosshead)

Please take a few moments to check all pack contents listed


Tenby Arbour Pack List				
Code	Item	Description	Quantity	
28090	А	Seat Back	1	
28091	В	Seat	1	
28092	C1	Side Panel Left	1	
28093	C2	Side Panel Right	1	
28094	D	Back Panels	2	
28095	Е	Roof Panels	2	
27830	F	Roof Support	1	
27831	G	Roof Capping	1	
27832	Н	Fascias	4	
28096	J	Finials	2	

28097 - Tenby Arbour Fixings List			
Item	Description	Quantity	
1	30mm Screws	12	
2	40mm Screws	8	
3	50mm Screws	20	
4	160mm Screws	4	
5	45mm Bolt, Nuts & Washers	6	
6	90mm Bolt, Nuts & Washers	6	



This product is made from pressure-treated timber. It should not be painted or coated with any other treatment until at least 6 months after purchase



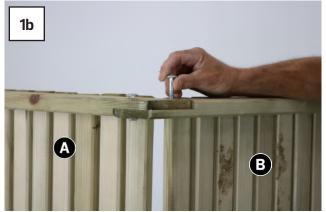

Interlock joints in Seat Back (A) with Seat (B) as shown in Fig. 1 and secure using 6x 45mm bolts, nuts & washers. (2x 45mm bolts per joint).









Insert 2x90mm bolts fully through the side holes (C2) and align with holes in the seat base assembly (B). Guide the seat assembly (B) onto the bolts. Use the movement in the bolts to position the seat flush against the side panel and behind the front post (C2) (see fig.2d). Repeat for other side using panel (C1). Secure the seat assembly back to the sides with 2 x 90mm bolts.






Position 1x Back Panel (D) in to base of block stopper in side panels and fix using 4x 40mm screws (2x screws per side).



Position remaining Back Panel (D) as shown in Fig. 4 and attach using 4x 40mm screws (2x 40mm screws per side)



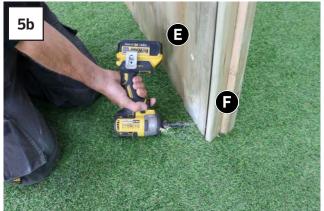

Attach 1x Roof Panel (E) to Roof Support (F) using 2x 60mm screws as shown in Figs. 5a &

Note: Ensure roof board overlap are in correct orientation as to avoid rainwater ingress.




Attach remaining Roof Panel (E) using 2x 60mm screws as shown in Fig. 5c (1x 60mm screw at each end).





Fix Roof Capping (G) to Roof Panels (E) using 4x 35mm screws (2x 35mm at each end) Note: Do not lay the roof flat on the apex at this point.

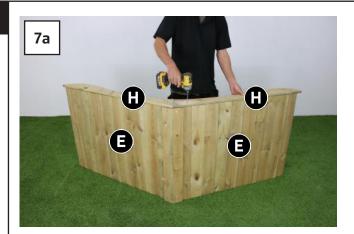







Set out 2x Fascia (H) as shown and attach to roof assembly using 6x50mm screws (3x 50mm screws per fascia).

Position Finial (J) as shown and attach using 4x 35mm screws.

Repeat procedure for remaining Fascia (H) and Finial (J) on opposite side of roof assembly.

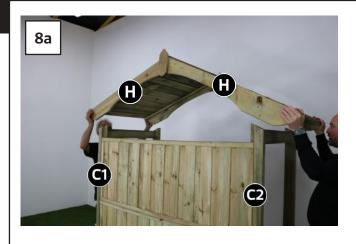

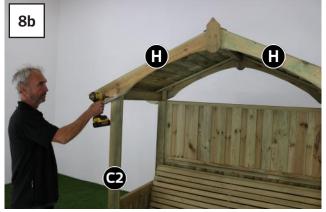

Locate roof assembly onto Side Panel (C1 & C2) posts and fix in position using 8x 50mm screws (2x 50mm screws per post).





The Tenby Arbour is now complete.